

FD **FLODRAULIC**



SELECTION GUIDE & PRICE LIST 2008



Motor Starters

EFFECTIVE JANUARY 1, 2008



| TYPE | ENCLOSURE | CONTROL | PAGE |
|-------|----------------------|------------|------|
| FVR | open | none | 2 |
| FVR | Type 1, 12, metal | Fwd-Rev | 8,9 |
| FVNR | open | none | 1 |
| FVNR | Starter Base and Lid | start/stop | 3 |
| FVNR | Type 4, non-metallic | start/stop | 4 |
| FVNR | Type 1, metal | start/stop | 5 |
| FVNR | Type 1, metal | HOA | 6 |
| FVNR | Type 12, metal | HOA | 7 |
| 2-spd | Type 1, 12, metal | High-Low | 10 |



Open Style Non-Reversing Starters with 3 pole thermal overload relay

Start-Stop/Reset includes start aux. contact



| Amp AC3 | Horsepower | | | | | | Overload Range | Stop/Reset | | Start-Stop/Reset | |
|-----------|------------|-----------|---------|-----------|---------|-----------|----------------|------------|---------|------------------|---------|
| | 115/1 | 230/1 | 208/3 | 230/3 | 460/3 | 600/3 | | Code # | List \$ | Code # | List \$ |
| 9 | - | - | - | - | - | - | .13 - .20 | 047B5560 | 168 | 047B5500 | 175 |
| | - | - | - | - | - | - | .19 - .29 | 047B5561 | | 047B5501 | |
| | - | - | - | - | - | - | .27 - .42 | 047B5562 | | 047B5502 | |
| | - | - | - | - | - | - | .40 - .62 | 047B5563 | | 047B5503 | |
| | - | - | - | - | - | 1/2 | .60 - .92 | 047B5564 | | 047B5504 | |
| | - | - | 1/4 | 1/4 | 1/2 | 3/4 - 1 | .85 - 1.3 | 047B5565 | | 047B5505 | |
| | - | 1/6 | 1/3 | 1/3 | 3/4 - 1 | 1.5 | 1.2 - 1.9 | 047B5566 | | 047B5506 | |
| | - | 1/4 | 1/2 | 1/2 - 3/4 | 1.5 | 2 | 1.8 - 2.8 | 047B5567 | | 047B5507 | |
| | 1/6 | 1/3 | 3/4 - 1 | 3/4 - 1 | 2 | 3 | 2.7 - 4.2 | 047B5568 | | 047B5508 | |
| | 1/4 | 1/2 - 3/4 | 1.5 | 1.5 - 2 | 3 | 5 | 4.0 - 6.2 | 047B5569 | | 047B5509 | |
| 1/3 - 1/2 | 1 | 2 | 3 | 5 | 7.5 | 6.0 - 9.2 | 047B5570 | 047B5510 | | | |
| 12 | 3/4 | 2 | 3 | 4 | 7.5 | 10 | 8 - 12 | 047B5586 | 180 | 047B5526 | 186 |
| 16 | 1 | 3 | 5 | 5 | 10 | 15 | 11 - 16 | 047B5602 | 205 | 047B5542 | 214 |
| 25 | 1.5 | 3 | 5 | 5 | 15 | 15 | 15 - 20 | 047B5618 | 274 | 047B5558 | 281 |
| | 2 | 4 | 7.5 | 7.5 | 15 | 20 | 19 - 25 | 047B5619 | | 047B5559 | |
| 30 | 2 | 5 | 10 | 10 | 20 | 20 | 24 - 32 | 047B6056 | 365 | 047B6059 | 372 |
| 32 | 3 | 5 | 10 | 10 | 20 | 25 | 22 - 32 | 047B6050 | 461 | 047B6052 | 469 |
| 37 | 3 | 7.5 | 15 | 15 | 25 | 30 | 30 - 45 | 047B6057 | 548 | 047B6060 | 557 |
| 50 | 3 | 7.5 | 15 | 15 | 30 | 40 | 30 - 45 | 047B6064 | 634 | 047B6065 | 641 |
| | 5 | 10 | 15 | 15 | 30 | 40 | 42 - 63 | 047B6058 | | 047B6061 | |

 
IMPORTANT Add coil suffix to code numbers as follows:

| | |
|----|------------|
| 14 | 24V/60 |
| 23 | 110V,50/60 |
| 28 | 208/230,60 |
| 37 | 460V/60 |
| 94 | 575V/60 |



**Open Style Rev.
Starter (1 phase)
with 3 pole thermal
overload relay**

includes 1NO, 1NC aux.
contact per contactor

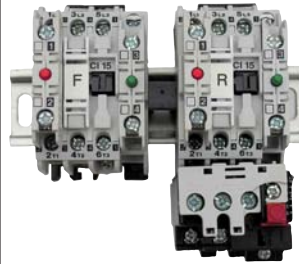

**Open Style Rev.
Starter (3 phase)
with 3 pole thermal
overload relay**

includes 1NO, 1NC aux.
contact per contactor



| Amp AC3 | Horsepower (1ph) | | Overload Range | Code # | List \$ | Horsepower (3ph) | | | | Code # | List \$ |
|------------|------------------|-----------|-------------------|----------|---------|------------------|-----------|---------|---------|----------|---------|
| | 115/1 | 230/1 | | | | 208/3 | 230/3 | 460/3 | 600/3 | | |
| 9 | - | - | .60 - .92 | NA | NA | - | - | - | 1/2 | 047L5404 | 385 |
| | - | - | .85 - 1.3 | NA | NA | 1/4 | 1/4 | 1/2 | 3/4 - 1 | 047L5405 | |
| | - | 1/6 | 1.2 - 1.9 | 047B6070 | | 1/3 | 1/3 | 3/4 - 1 | 1.5 | 047L5407 | |
| | - | 1/4 | 1.8 - 2.8 | 047B6071 | | 1/2 | 1/2 - 3/4 | 1.5 | 2 | 047L5408 | |
| | 1/6 | 1/3 | 2.7 - 4.2 | 047B6072 | 385 | 3/4 - 1 | 3/4 - 1 | 2 | 3 | 047L5409 | |
| | 1/4 | 1/2 - 3/4 | 4.0 - 6.2 | 047B6073 | | 1.5 | 1.5 - 2 | 3 | 5 | 047L5635 | |
| | 1/3 - 1/2 | 1 | 6.0 - 9.2 | 047B6074 | | 2 | 3 | 5 | 7.5 | 047L5636 | |
| 12 | 3/4 | 2 | 8 - 12 | 047B6075 | 402 | 3 | 4 | 7.5 | 10 | 047B6082 | 402 |
| 16 | 1 | 3 | 11 - 16 | 047B6076 | 410 | 5 | 5 | 10 | 15 | 047B6084 | 410 |
| 25 | 1.5 | 3 | 15 - 20 | 047B6077 | 479 | 5 | 5 | 15 | 15 | 047B5638 | 479 |
| | 2 | 4 | 19 - 25 | 047B6078 | | 7.5 | 7.5 | 15 | 20 | 047B6085 | |
| 30 | 2 | 5 | 24 - 32 | 047B6079 | 582 | 10 | 10 | 20 | 20 | 047B6086 | 582 |
| 32 | 3 | 5 | 22 - 32 | 047B5958 | 812 | 10 | 10 | 20 | 25 | 047B6087 | 812 |
| 37 | 3 | 7.5 | 30 - 45 | 047B6080 | 868 | 15 | 15 | 25 | 30 | 047B6088 | 868 |
| | | | 30 - 45 | NA | NA | 15 | 15 | 30 | 40 | 047B6089 | 932 |
| 50 | 5 | 10 | 42 - 63 | 047B6058 | 932 | | | | | | |

IMPORTANT Add coil suffix to code numbers as follows:

| | |
|----|------------|
| 14 | 24V/60 |
| 23 | 110V,50/60 |
| 28 | 208/230,60 |
| 37 | 460V/60 |
| 94 | 575V/60 |



Starter Base and Lid

| NEMA 1-IP55 | | LIST PRICE |
|-------------|-----------------------|------------|
| 047L537200 | Blank Lid NEMA 1-IP55 | \$36.00 |
| 047L537100 | Stop/Reset Button | \$49.20 |
| 047L537000 | Start and Stop/Reset | \$57.60 |

| NEMA 4-IP65 | | LIST PRICE |
|-------------|----------------------|------------|
| 047L539600 | Blank Lid | \$39.60 |
| 047L539700 | Stop/Reset Button | \$54.00 |
| 047L539800 | Start and Stop/Reset | \$61.20 |
| 047X576100 | Start Button | \$49.20 |

| BASES | | |
|------------|--------------|---------|
| 047B574200 | Plastic Base | \$50.40 |



BLANK



STOP/RESET



START/STOP/RESET



START



NOTE:
NEMA 4 version shown
in all pictures.



Enclosed Non-Reversing Starters with 3 pole thermal overload relay

TYPE 4 (non-metallic base and cover)
Start-Stop/Reset includes start aux. contact



| Amp AC3 | Horsepower | | | | | | Overload Range | Stop/Reset | | Start-Stop/Reset | |
|------------|------------|-----------|---------|-----------|---------|-----------|-------------------|------------|---------|------------------|---------|
| | 115/1 | 230/1 | 208/3 | 230/3 | 460/3 | 600/3 | | Code # | List \$ | Code # | List \$ |
| 9 | - | - | - | - | - | - | .13 - .20 | 047B5834 | 263 | 047B5862 | 280 |
| | - | - | - | - | - | - | .19 - .29 | 047B5835 | | 047B5863 | |
| | - | - | - | - | - | - | .27 - .42 | 047B5836 | | 047B5864 | |
| | - | - | - | - | - | - | .40 - .62 | 047B5837 | | 047B5865 | |
| | - | - | - | - | - | 1/2 | .60 - .92 | 047B5819 | | 047B5821 | |
| | - | - | 1/4 | 1/4 | 1/2 | 3/4 - 1 | .85 - 1.3 | 047B5818 | | 047B5820 | |
| | - | 1/6 | 1/3 | 1/3 | 3/4 - 1 | 1.5 | 1.2 - 1.9 | 047B5807 | | 047B5816 | |
| | - | 1/4 | 1/2 | 1/2 - 3/4 | 1.5 | 2 | 1.8 - 2.8 | 047B5808 | | 047B5817 | |
| | 1/6 | 1/3 | 3/4 - 1 | 3/4 - 1 | 2 | 3 | 2.7 - 4.2 | 047B5800 | | 047B5809 | |
| | 1/4 | 1/2 - 3/4 | 1.5 | 1.5 - 2 | 3 | 5 | 4.0 - 6.2 | 047B5801 | | 047B5810 | |
| 1/3 - 1/2 | 1 | 2 | 3 | 5 | 7.5 | 6.0 - 9.2 | 047B5802 | 047B5811 | | | |
| 12 | 3/4 | 2 | 3 | 4 | 7.5 | 10 | 8 - 12 | 047B5803 | 272 | 047B5812 | 286 |
| 16 | 1 | 3 | 5 | 5 | 10 | 15 | 11 - 16 | 047B5804 | 299 | 047B5813 | 311 |
| 25 | 1.5 | 3 | 5 | 5 | 15 | 15 | 15 - 20 | 047B5805 | 356 | 047B5814 | 370 |
| | 2 | 4 | 7.5 | 7.5 | 15 | 20 | 19 - 25 | 047B5861 | | 047B5889 | |

IMPORTANT Add coil suffix to code numbers as follows:

| | |
|----|------------|
| 14 | 24V/60 |
| 23 | 110V,50/60 |
| 28 | 208/230,60 |
| 37 | 460V/60 |
| 94 | 575V/60 |



Enclosed Non-Reversing Starters with 3 pole thermal overload relay

TYPE 1 (steel enclosure with hinged door)
Start-Stop/Reset includes start aux. contact



| Amp AC3 | Horsepower | | | | | | Overload Range | Stop/Reset | | Start-Stop/Reset | |
|------------|------------|-------|-------|-------|-------|-------|-------------------|------------|---------|------------------|---------|
| | 115/1 | 230/1 | 208/3 | 230/3 | 460/3 | 600/3 | | Code # | List \$ | Code # | List \$ |
| 25 | 2 | 4 | 7.5 | 7.5 | 15 | 20 | 19 - 25 | 047B5833 | 512 | 047B5832 | 530 |
| 30 | 2 | 5 | 10 | 10 | 20 | 20 | 24 - 32 | 047B5977 | 561 | 047B5978 | 576 |
| 32 | 3 | 5 | 10 | 10 | 20 | 25 | 22 - 32 | 047B5822 | 654 | 047B5824 | 669 |
| 37 | 3 | 7.5 | 15 | 15 | 25 | 30 | 30 - 45 | 047B5979 | 702 | 047B5980 | 719 |
| 50 | 3 | 7.5 | 10 | 15 | 30 | 40 | 30 - 45 | 047B5981 | 794 | 047B5982 | 807 |



Enclosed Non-Reversing Starters with 3 pole thermal overload relay

TYPE 12 (steel enclosure with hinged door)
Start-Stop/Reset includes start aux. contact



| Amp AC3 | Horsepower | | | | | | Overload Range | Stop/Reset | | Start-Stop/Reset | |
|------------|------------|-------|-------|-------|-------|-------|-------------------|------------|---------|------------------|---------|
| | 115/1 | 230/1 | 208/3 | 230/3 | 460/3 | 600/3 | | Code # | List \$ | Code # | List \$ |
| 25 | 2 | 4 | 7.5 | 7.5 | 15 | 20 | 19 - 25 | 047B5831 | 597 | 047B5830 | 611 |
| 30 | 2 | 5 | 10 | 10 | 20 | 20 | 24 - 32 | 047B5983 | 611 | 047B5984 | 670 |
| 32 | 3 | 5 | 10 | 10 | 20 | 25 | 22 - 32 | 047B5826 | 814 | 047B5828 | 833 |
| 37 | 3 | 7.5 | 15 | 15 | 25 | 30 | 30 - 45 | 047B5985 | 876 | 047B5986 | 889 |
| 50 | 3 | 7.5 | 10 | 15 | 30 | 40 | 30 - 45 | 047B5987 | 964 | 047B5988 | 981 |

IMPORTANT Add coil suffix to code numbers as follows:

| | |
|----|------------|
| 14 | 24V/60 |
| 23 | 110V,50/60 |
| 28 | 208/230,60 |
| 37 | 460V/60 |
| 94 | 575V/60 |



Enclosed Non-Rev. Starter (1 phase)

with 3 pole thermal overload relay

TYPE 1 (steel encl. with hinged door)
Hand-Off-Auto Sel Sw & pilot light



Enclosed Non-Rev. Starter (3 phase)

with 3 pole thermal overload relay

TYPE 1 (steel encl. with hinged door)
Hand-Off-Auto Sel Sw & pilot light
incl. control transformer, add suffix from table



| Amp AC3 | Horsepower (1ph) | | Overload Range | Code # | List \$ | Horsepower (3ph) | | | | Code # | List \$ |
|---------|------------------|-----------|----------------|----------|---------|------------------|-----------|---------|---------|----------|----------|
| | 115/1 | 230/1 | | | | 208/3 | 230/3 | 460/3 | 600/3 | | |
| 9 | - | - | .60 - .92 | NA | NA | - | - | - | 1/2 | 047X5000 | 719 |
| | - | - | .85 - 1.3 | NA | NA | 1/4 | 1/4 | 1/2 | 3/4 - 1 | 047X5001 | |
| | - | 1/6 | 1.2 - 1.9 | 047X5013 | 488 | 1/3 | 1/3 | 3/4 - 1 | 1.5 | 047X5002 | |
| | - | 1/4 | 1.8 - 2.8 | 047X5014 | | 1/2 | 1/2 - 3/4 | 1.5 | 2 | 047X5003 | |
| | 1/6 | 1/3 | 2.7 - 4.2 | 047X5015 | | 3/4 - 1 | 3/4 - 1 | 2 | 3 | 047X5004 | |
| | 1/4 | 1/2 - 3/4 | 4.0 - 6.2 | 047X5016 | | 1.5 | 1.5 - 2 | 3 | 5 | 047X5005 | |
| | 1/3 - 1/2 | 1 | 6.0 - 9.2 | 047X5017 | | 2 | 3 | 5 | 7.5 | 047X5006 | |
| 12 | 3/4 | 2 | 8 - 12 | 047X5018 | | 495 | 3 | 4 | 7.5 | 10 | 047X5007 |
| 16 | 1 | 3 | 11 - 16 | 047X5019 | 524 | 5 | 5 | 10 | 15 | 047X5008 | 746 |
| 25 | 1.5 | 3 | 15 - 20 | 047X5020 | 570 | 5 | 5 | 15 | 15 | 047X5009 | 792 |
| | 2 | 4 | 19 - 25 | 047X5021 | | 7.5 | 7.5 | 15 | 20 | 047X5010 | |
| 30 | 2 | 5 | 24 - 32 | 047X5025 | 637 | 10 | 10 | 20 | 20 | 047X5041 | 861 |
| 32 | 3 | 5 | 22 - 32 | 047X5061 | 854 | 10 | 10 | 20 | 25 | 047X5042 | 1124 |
| 37 | 3 | 7.5 | 30 - 45 | 047X5026 | 894 | 15 | 15 | 25 | 30 | 047X5043 | 1163 |
| 50 | 3 | 10 | 42 - 63 | 047X5027 | 912 | 15 | 15 | 30 | 40 | 047X5044 | 1196 |

IMPORTANT If using different coil voltage than motor voltage, add proper transformer suffix:

| | | |
|----|---------|-----|
| 11 | 110/24V | 185 |
| 12 | 240/24V | 185 |

IMPORTANT Add control transformer suffix as follows:

| | | | |
|----|---------|----|---------|
| 01 | 600/24 | 06 | 460/240 |
| 02 | 600/120 | 07 | 240/24 |
| 03 | 600/240 | 08 | 240/120 |
| 04 | 460/24 | 09 | 208/24 |
| 05 | 460/120 | 10 | 208/120 |



Enclosed Non-Rev. Starter (1 phase)

with 3 pole thermal overload relay

TYPE 12 (steel encl. with hinged door)
Hand-Off-Auto Sel Sw & pilot light



Enclosed Non-Rev. Starter (3 phase)

with 3 pole thermal overload relay

TYPE 12 (steel encl. with hinged door)
Hand-Off-Auto Sel Sw & pilot light
incl. control transformer, add suffix from table



| Amp AC3 | Horsepower (1ph) | | Overload Range | Code # | List \$ | Horsepower (3ph) | | | | Code # | List \$ |
|---------|------------------|-----------|----------------|----------|---------|------------------|-----------|---------|---------|----------|---------|
| | 115/1 | 230/1 | | | | 208/3 | 230/3 | 460/3 | 600/3 | | |
| 9 | - | - | .60 - .92 | NA | NA | - | - | - | 1/2 | 047X5045 | 765 |
| | - | - | .85 - 1.3 | NA | NA | 1/4 | 1/4 | 1/2 | 3/4 - 1 | 047X5046 | |
| | - | 1/6 | 1.2 - 1.9 | 047X5028 | 534 | 1/3 | 1/3 | 3/4 - 1 | 1.5 | 047X5047 | |
| | - | 1/4 | 1.8 - 2.8 | 047X5029 | | 1/2 | 1/2 - 3/4 | 1.5 | 2 | 047X5048 | |
| | 1/6 | 1/3 | 2.7 - 4.2 | 047X5030 | | 3/4 - 1 | 3/4 - 1 | 2 | 3 | 047X5049 | |
| | 1/4 | 1/2 - 3/4 | 4.0 - 6.2 | 047X5031 | | 1.5 | 1.5 - 2 | 3 | 5 | 047X5050 | |
| | 1/3 - 1/2 | 1 | 6.0 - 9.2 | 047X5032 | | 2 | 3 | 5 | 7.5 | 047X5051 | |
| 12 | 3/4 | 2 | 8 - 12 | 047X5033 | 545 | 3 | 4 | 7.5 | 10 | 047X5052 | 772 |
| 16 | 1 | 3 | 11 - 16 | 047X5034 | 572 | 5 | 5 | 10 | 15 | 047X5054 | 792 |
| 25 | 1.5 | 3 | 15 - 20 | 047X5035 | 621 | 5 | 5 | 15 | 15 | 047X5055 | 839 |
| | 2 | 4 | 19 - 25 | 047X5036 | | 7.5 | 7.5 | 15 | 20 | 047X5056 | |
| 30 | 2 | 5 | 24 - 32 | 047X5037 | 692 | 10 | 10 | 20 | 20 | 047X5057 | 908 |
| 32 | 3 | 5 | 22 - 32 | 047X5062 | 944 | 10 | 10 | 20 | 25 | 047X5058 | 1170 |
| 37 | 3 | 7.5 | 30 - 45 | 047X5038 | 985 | 15 | 15 | 25 | 30 | 047X5059 | 1209 |
| 50 | 3 | 10 | 42 - 63 | 047X5039 | 1036 | 15 | 15 | 30 | 40 | 047X5060 | 1242 |

IMPORTANT If using different coil voltage than motor voltage, add proper transformer suffix:

| | | |
|----|---------|-----|
| 11 | 110/24V | 185 |
| 12 | 240/24V | 185 |


IMPORTANT Add control transformer suffix as follows:

| | | | |
|----|---------|----|---------|
| 01 | 600/24 | 06 | 460/240 |
| 02 | 600/120 | 07 | 240/24 |
| 03 | 600/240 | 08 | 240/120 |
| 04 | 460/24 | 09 | 208/24 |
| 05 | 460/120 | 10 | 208/120 |



**Enclosed Rev.
Starter (1 phase)
with 3 pole thermal
overload relay**

 TYPE 1 and 12
(steel encl. with hinged door)

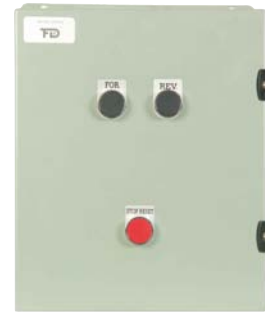

| Amp AC3 | Horsepower | | Overload Range | Stop/Reset (Type 1) | | Forward-Reverse Stop/Reset (Type 1) | | Forward-Reverse Stop/Reset (Type 12) | |
|------------|------------|-----------|-------------------|---------------------|---------|-------------------------------------|---------|--------------------------------------|---------|
| | 115/1 | 230/1 | | Code # | List \$ | Code # | List \$ | Code # | List \$ |
| 9 | - | 1/6 | 1.2 - 1.9 | 047B5995 | 548 | 047B6015 | 558 | 047B6035 | 711 |
| | - | 1/4 | 1.8 - 2.8 | 047B5996 | | 047B6016 | | 047B6036 | |
| | 1/6 | 1/3 | 2.7 - 4.2 | 047B5997 | | 047B6017 | | 047B6037 | |
| | 1/4 | 1/2 - 3/4 | 4.0 - 6.2 | 047B5998 | | 047B6018 | | 047B6038 | |
| | 1/3 - 1/2 | 1 | 6.0 - 9.2 | 047B5999 | | 047B6019 | | 047B6039 | |
| 12 | 3/4 | 2 | 8 - 12 | 047B6000 | 564 | 047B6020 | 575 | 047B6040 | 726 |
| 16 | 1 | 3 | 11 - 16 | 047B6001 | 624 | 047B6021 | 634 | 047B6041 | 861 |
| 25 | 1.5 | 3 | 15 - 20 | 047B6002 | 768 | 047B6022 | 780 | 047B6042 | 918 |
| | 2 | 4 | 19 - 25 | 047B6003 | | 047B6023 | | 047B6043 | |
| 30 | 2 | 5 | 24 - 32 | 047B6004 | 876 | 047B6024 | 886 | 047B6044 | 1032 |
| 32 | 2 | 5 | 22 - 32 | 047B5959 | 1235 | 047B5960 | 1246 | 047B5961 | 1286 |
| 37 | 2 | 7.5 | 30 - 45 | 047B6005 | 1314 | 047B6025 | 1325 | 047B6045 | 1362 |
| 50 | 3 | 5 | 42 - 63 | 047B6006 | 1440 | 047B6026 | 1481 | 047B6046 | 1520 |


IMPORTANT Add coil suffix to code numbers as follows:

| | |
|----|------------|
| 14 | 24V/60 |
| 23 | 110V,50/60 |
| 28 | 208/230,60 |



**Enclosed Rev.
Starter (3 phase)
with 3 pole thermal
overload relay**

 TYPE 1 and 12
(steel encl. with hinged door)

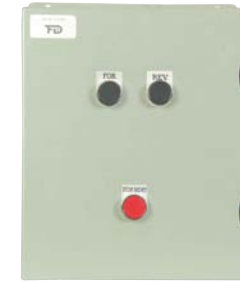

| Amps | Horsepower | | | | Overload Range | Stop/Reset (Type 1) | | Forward-Reverse Stop/Reset (Type 1) | | Forward-Reverse Stop/Reset (Type 12) | |
|------|------------|-----------|---------|---------|-------------------|---------------------|---------|-------------------------------------|---------|--------------------------------------|---------|
| | 208V | 230V | 460V | 600V | | Code # | List \$ | Code # | List \$ | Code # | List \$ |
| 9 | - | - | - | 1/2 | .60 - .92 | 047L5366 | 548 | 047L5360 | 558 | 047B6047 | 711 |
| | 1/4 | 1/4 | 1/2 | 3/4 - 1 | .85 - 1.3 | 047L5367 | | 047L5361 | | 047B6048 | |
| | 1/3 | 1/3 | 3/4 - 1 | 1 1/2 | 1.2 - 1.9 | 047L5369 | | 047L5363 | | 047B6049 | |
| | 1/2 | 1/2 - 3/4 | 1 1/2 | 2 | 1.8 - 2.8 | 047L5373 | | 047L5364 | | 047B5728 | |
| | 3/4 - 1 | 3/4 - 1 | 2 | 3 | 2.7 - 4.2 | 047L5374 | | 047L5356 | | 047B5734 | |
| | 1 1/2 | 1 1/2 - 2 | 3 | 5 | 4.0 - 6.2 | 047L5385 | | 047B5356 | | 047B5735 | |
| | 2 | 3 | 5 | 7 1/2 | 6.0 - 9.2 | 047L5357 | | 047B5486 | | 047B6090 | |
| 12 | 3 | - | 7 1/2 | 10 | 8 - 12 | 047L6007 | 564 | 047B6027 | 575 | 047B6091 | 726 |
| 16 | - | 5 | 10 | 15 | 11 - 16 | 047L6009 | 624 | 047B6029 | 634 | 047B6093 | 861 |
| 25 | 5 | - | 15 | - | 15 - 20 | 047L5359 | 768 | 047B5488 | 780 | 047B6094 | 918 |
| | - | 7 1/2 | - | 20 | 19 - 25 | 047L6010 | | 047B6030 | | 047B6095 | |
| 30 | 7 1/2 | - | - | - | 24 - 32 | 047L6011 | 876 | 047B6031 | 886 | 047B6096 | 1032 |
| 32 | - | 10 | 20 | 25 | 22 - 32 | 047L6012 | 1235 | 047B6032 | 1246 | 047B6097 | 1286 |
| 37 | - | 15 | 25 | 30 | 30 - 45 | 047L6013 | 1314 | 047B6033 | 1325 | 047B6098 | 1362 |
| 50 | 10 | 15 | 30 | 40 | 42 - 63 | 047L6014 | 1440 | 047B6034 | 1481 | 047B6099 | 1520 |

IMPORTANT Add coil suffix to code numbers as follows:

| | |
|----|-------------|
| 28 | 208/230V/60 |
| 37 | 460V/60 |
| 94 | 575V/60 |



Enclosed 2-SPD 2-WDG Starters with 3 pole thermal overload relay

TYPE 1 and 12 (steel enclosure with hinged door) constant or variable torque

| Horsepower | | | | TYPE 1 | | | | TYPE 12 | | | |
|------------|-------|-------|-------|------------|---------|----------|---------|------------|---------|----------|---------|
| | | | | HIGH - LOW | | REMOTE | | HIGH - LOW | | REMOTE | |
| 208/3 | 230/3 | 460/3 | 575/3 | Code # | List \$ | Code # | List \$ | Code # | List \$ | Code # | List \$ |
| 1.5 | 2 | 3 | 5 | 047X5312 | 906 | 047X5324 | 883 | 047X5358 | 1047 | 047X5374 | 1023 |
| 2 | 3 | 5 | 7.5 | 047X5313 | 918 | 047X5325 | 896 | 047X5359 | 1059 | 047X5375 | 1037 |
| 3 | 4 | 7.5 | 10 | 047X5314 | 943 | 047X5326 | 920 | 047X5360 | 1084 | 047X5376 | 1061 |
| 3 | 5 | 10 | 15 | 047X5315 | 997 | 047X5327 | 975 | 047X5361 | 1138 | 047X5377 | 1116 |
| 5 | 7.5 | 15 | 20 | 047X5342 | 1042 | 047X5350 | 1019 | 047X5362 | 1183 | 047X5378 | 1160 |
| 7.5 | 10 | 20 | 25 | 047X5343 | 1391 | 047X5351 | 1369 | 047X5363 | 1452 | 047X5379 | 1429 |
| 10 | 15 | 25 | 30 | 047X5344 | 1479 | 047X5352 | 1457 | 047X5364 | 1540 | 047X5380 | 1517 |
| 15 | 15 | 30 | 40 | 047X5345 | 1502 | 047X5353 | 1480 | 047X5365 | 1561 | 047X5381 | 1539 |

CAUTION: Motor FLA at high and low speeds MUST be advised at time of selection.



Enclosed 2-SPD1-WDG Starters with 3 pole thermal overload relay

TYPE 1 and 12 (steel enclosure with hinged door) constant or variable torque

| Horsepower | | | | TYPE 1 | | | | TYPE 12 | | | |
|------------|-------|-------|-------|------------|---------|----------|---------|------------|---------|----------|---------|
| | | | | HIGH - LOW | | REMOTE | | HIGH - LOW | | REMOTE | |
| 208/3 | 230/3 | 460/3 | 575/3 | Code # | List \$ | Code # | List \$ | Code # | List \$ | Code # | List \$ |
| 1.5 | 2 | 3 | 5 | 047X5318 | 962 | 047X5330 | 940 | 047X5366 | 1075 | 047X5382 | 1054 |
| 2 | 3 | 5 | 7.5 | 047X5319 | 987 | 047X5331 | 965 | 047X5367 | 1106 | 047X5383 | 1084 |
| 3 | 4 | 7.5 | 10 | 047X5320 | 1042 | 047X5332 | 1019 | 047X5368 | 1158 | 047X5384 | 1136 |
| 3 | 5 | 10 | 15 | 047X5321 | 1138 | 047X5333 | 1116 | 047X5369 | 1250 | 047X5385 | 1227 |
| 5 | 7.5 | 15 | 20 | 047X5346 | 1492 | 047X5354 | 1470 | 047X5370 | 1580 | 047X5386 | 1558 |
| 7.5 | 10 | 20 | 25 | 047X5347 | 1619 | 047X5355 | 1595 | 047X5371 | 1724 | 047X5387 | 1702 |
| 10 | 15 | 25 | 30 | 047X5348 | 1709 | 047X5356 | 1687 | 047X5372 | 1800 | 047X5388 | 1777 |
| 15 | 15 | 30 | 40 | 047X5349 | 1724 | 047X5357 | 1701 | 047X5373 | 1814 | 047X5389 | 1790 |

CAUTION: Motor FLA at high and low speeds MUST be advised at time of selection.

IMPORTANT Add coil suffix to code numbers as follows:

| | | | | | | | | | |
|----|--------|----|------------|----|------------|----|---------|----|---------|
| 14 | 24V/60 | 23 | 110V,50/60 | 28 | 208/230,60 | 37 | 460V/60 | 94 | 575V/60 |
|----|--------|----|------------|----|------------|----|---------|----|---------|

The FloDraulic Group can accept no responsibility for possible errors in catalogs, brochure, other printed materials, and website information. The FloDraulic Group reserves the right to alter its products without notice. This also applies to products already on order provided that such alteration can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. The FloDraulic Group and its logos are registered trademarks of The FloDraulic Group. All rights reserved.



THE FLODRAULIC GROUP

45 Sinclair Ave.
Georgetown, ON L7G 4X4
Toll Free: 800-361-6209
Phone: 905-702-9456
Fax: 905-877-5616

www.flodraulic.com

CANADA

Toronto, ON
Windsor, ON
Edmonton, AB
Montreal, PQ

USA

Atlanta, GA
Columbus, OH
Springboro, OH
Indianapolis, IN
St. Louis, MO
Los Angeles, CA
Plymouth, MI
Tempe, AZ
Tucson, AZ